




美商海盗船

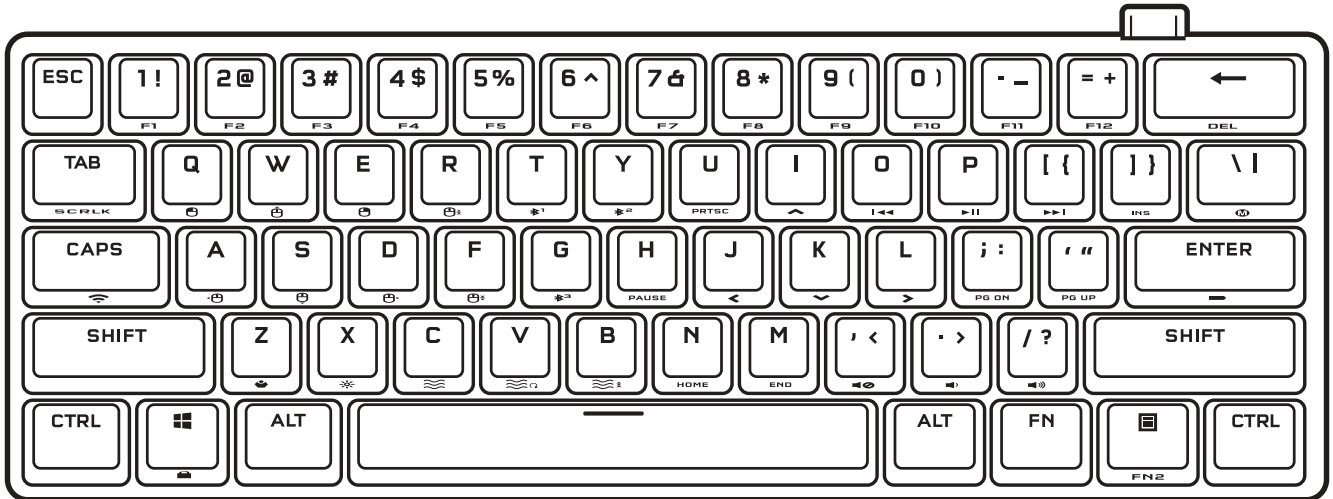

K70 PRO MINI

RGB 無線機械遊戲鍵盤


RGB WIRELESS MECHANICAL GAMING KEYBOARD

SC 简体中文

EN ENGLISH



了解您的键盘

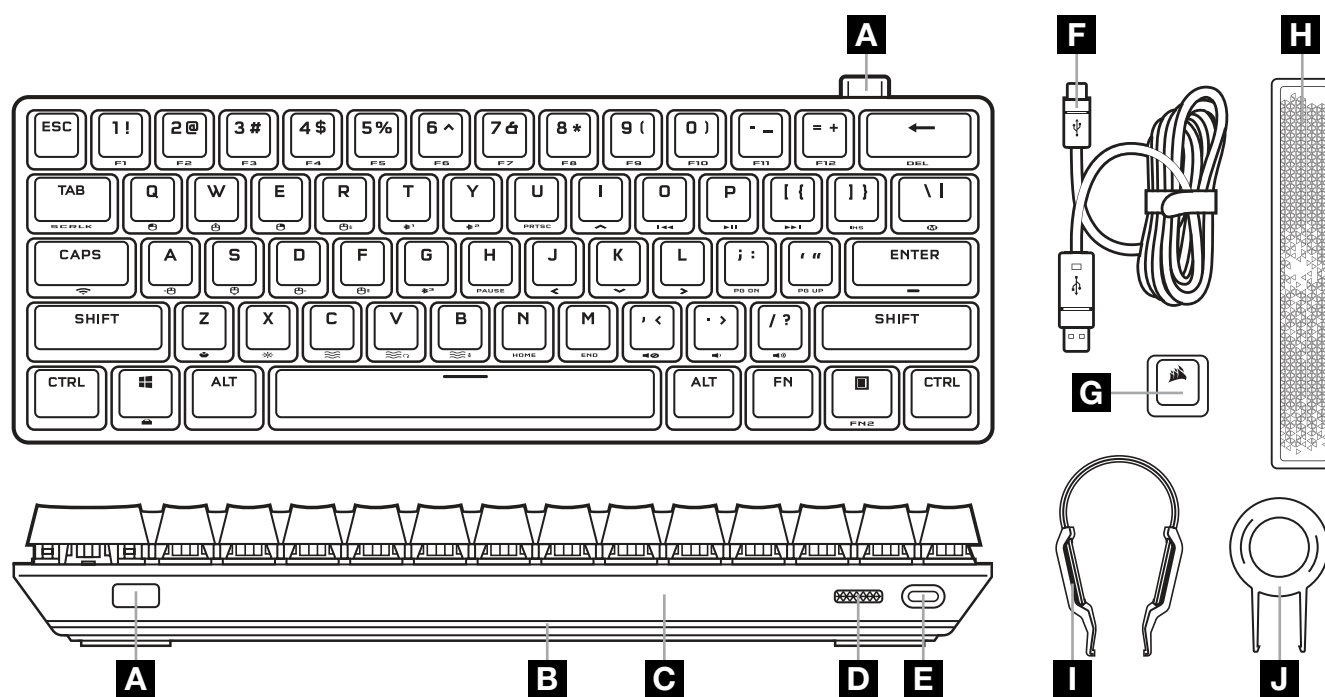

- A SLIPSTREAM WIRELESS 适配器
- B 360° LIGHTEDGE
- C 可拆卸式小配件
- D 电源开关
- E USB TYPE-C 端口

- F 可拆卸式 USB TYPE-C 转 TYPE-A 线缆
- G 可选带美商海盗船标识的 ESC 键
- H 可选发光式空格键
- I 拔键器
- J 按键开关拔出工具

首次使用前

首次使用前, 请为键盘充满电, 方法是将 USB 线缆 (F) 连接到键盘上的 USB Type-C 端口 (E) 以及兼容设备上可用的 USB 3.0 或更高级别的 Type-A 端口, 这些设备包括:

Windows® PC	Apple Mac®	Microsoft Xbox One* Microsoft Xbox Series X S*	PlayStation 4** PlayStation 5**
-------------	------------	---	------------------------------------

*键盘开箱即可使用, 有关详细信息, 请参阅 corsair.com/xbox-support。

**请参阅“连接到 Sony PlayStation”部分。

恢复出厂设置

按住 ESC 键的同时将开关 (D) 打开, 然后在两秒后松开 ESC 键。随后, 键盘将正常开启, 并重置为出厂默认设置。

充电和电池续航力

通过 USB 线缆插入兼容的设备时，键盘会指示充电状态。

指示灯	指示灯	状态
Enter 键	持续亮绿灯	电已充满
	闪动绿灯	正在充电

打开键盘电源或使用下方的检查电池续航力快捷方式，会显示当前电池充电的电量。

快捷方式	功能	按键上的指示灯	状态
FN + 	检查电池充电电量	持续亮绿灯	电已充满
		闪烁绿灯	电量较高
		闪烁琥珀色灯	电量中等
		闪烁红灯	电量较低
		闪动红灯	电量极低

技巧和窍门:

- 如果处于开机闲置状态，键盘将进入睡眠状态，以节省电池电量（可在 iCUE 中调整）
- 降低亮度或关闭背光灯以延长电池续航力（并加快充电速度）
- 在出现电量极低状态时及时充电，以延长电池的寿命
- 务必插入 USB 3.0 或更高级别的端口中，以确保有充足的充电电量

通过 SLIPSTREAM WIRELESS 进行连接

1. 将 SLIPSTREAM Wireless 适配器 (A) 插入可用的 USB 2.0 或更高级别的 Type-A 端口中
2. 打开键盘的电源开关 (D)
3. 切换到 SLIPSTREAM Wireless 模式（请参见下方）
4. 在 SLIPSTREAM 自动连接后，快捷方式按键会亮起白灯 3 秒



快捷方式	功能	按键上的指示灯	状态
FN +  (按下)	闪动白灯	持续亮白灯 (3 秒)	已连接
		闪动白灯	已断开连接

注意: 要完成与 SLIPSTREAM Wireless 适配器的配对，请在 iCUE 设备设置中启动适配器配对。

通过蓝牙无线进行连接

1. 在手机或平板电脑等主设备（支持蓝牙 4.0 或更高版本）上发起蓝牙配对*
2. 在键盘上开始蓝牙主设备配对, 可配对不超过三台设备（请查阅下方）
3. 在键盘上输入蓝牙设备屏幕上的代码（如果有需要）
4. 配对完成后, 蓝牙快捷方式按键会亮起蓝灯 3 秒

快捷方式	功能	按键上的指示灯	状态
FN +  ¹ (按下)	切换为蓝牙主机 1 模式	持续亮蓝灯 (3 秒)	已连接
		闪动蓝灯	已断开连接
FN +  ¹ (按住)	开始蓝牙主机 1 配对*	快速闪烁蓝灯	正在配对
FN +  ² (按下)	切换为蓝牙主机 2 模式	持续亮蓝灯 (3 秒)	已连接
		闪动蓝灯	已断开连接
FN +  ² (按住)	开始蓝牙主机 2 配对*	快速闪烁蓝灯	正在配对
FN +  ³ (按下)	切换为蓝牙主机 3 模式	持续亮蓝灯 (3 秒)	已连接
		闪动蓝灯	已断开连接
FN +  ³ (按住)	开始蓝牙主机 3 配对*	快速闪烁蓝灯	正在配对

*蓝牙主设备必须支持标准键盘 HID 输入。

通过 USB 线缆进行连接

1. 通过 USB 线缆将键盘连接到 USB 3.0 或更高级别的 Type-A 端口中
键盘将自动切换到 USB 有线模式
2. 前往 iCUE 设备设置, 选择 CORSAIR AXON 技术*, 实现高达 8,000Hz 的超级轮询



*PC 和 Mac 支持高达 8,000Hz 的超级轮询。Xbox 和 PlayStation 游戏机仅支持 1,000Hz 的轮询。

注意: 按无线快捷方式可随时切换到无线模式。再次按同一个快捷方式可切换回 USB 有线模式。

连接到 SONY PLAYSTATION

键盘还具有支持 Sony PlayStation 4 和 5 的特殊模式, 可通过快捷方式激活 SLIPSTREAM Wireless 和 USB 有线模式。

快捷方式	功能	按键上的指示灯
FN +  (按住 5 秒)	切换到 PlayStation 模式	持续亮白灯 (5 秒) 然后闪烁白灯
	切换回标准模式	持续亮白灯 (6 秒)

注意: 根据游戏机的支持情况和应用程序, 可用的功能可能会受到限制。

软件模式

运行 iCUE 时, 键盘将以软件模式运行, 并受到 iCUE 的控制。



从 corsair.com/downloads 下载 iCUE, 并安装到 Windows PC 或 Apple Mac 上, 以便将所有兼容 CORSAIR iCUE 的产品汇聚到一个界面, 从灯光到功能强大的宏, 一切尽在您的掌控之下。

硬件模式

未运行 iCUE, 或键盘连接到不支持 iCUE 的设备时, 键盘会以硬件模式运行, 使用的是保存到板载存储空间的配置文件和设置。




借助 iCUE 和 AXON Hyper-Processing Technology, 您可以在 8MB 的板载存储空间中尽情创建自定义配置文件。每个配置文件都可以存储复杂的背光效果 (高达 20 层)、操作和宏以及设置。*

*可以保存到板载存储空间的每个配置文件的灯光效果层数和配置文件总数, 可能会依据复杂情况而有所差异。


更换按键开关

按键开关可以拆卸，并替换为任何种类的机械按键开关，或与 CHERRY MX RGB 机械按键开关配合使用。其他采用 3 针脚设计的第三方机械按键开关可能会兼容，但由于外形上的差异，不能保证适配。


1. 从键帽上方向下推拔键器 (J)，然后提起拔键器以移除键帽。

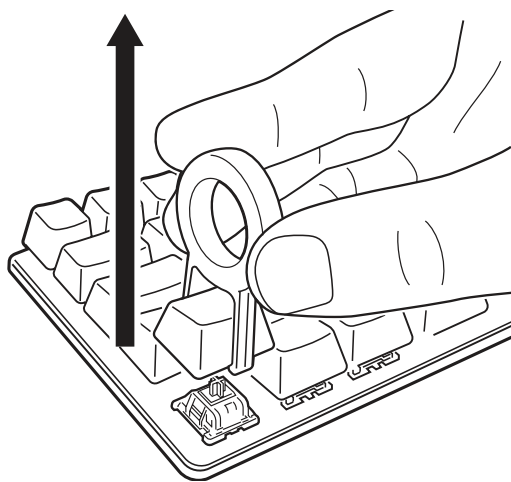


2. 将按键开关拔出工具 (I) 的尖端放在按键开关顶部下方和底部的舌片处，向下按然后提起按键开关，随即可将其移除

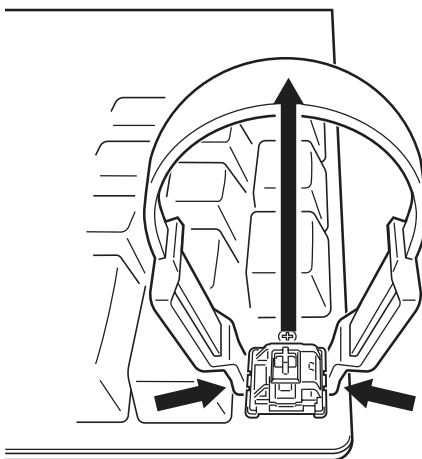

3. 将新按键开关的针脚和底部与插槽和开口对齐。

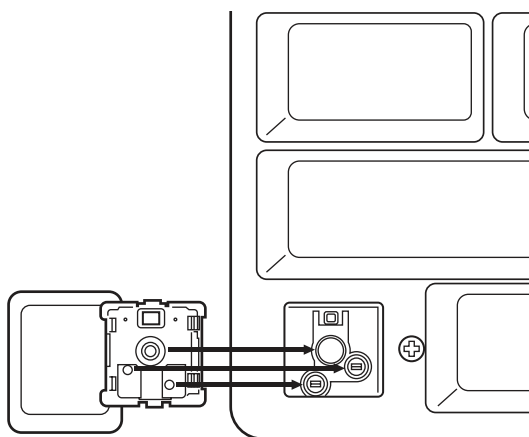

4. 将按键开关小心地向下按，直至其卡入到位。如果您感觉到有任何阻力，请取下按键开关，然后再试着重新安装。

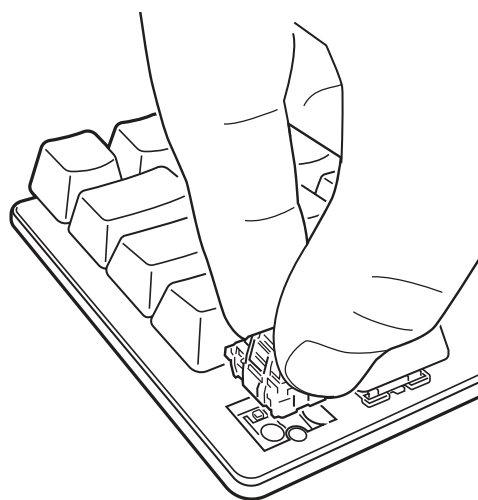

注意：确保在插入前正确地对齐新按键开关，防止针脚弯曲或损坏。

配置文件和锁定功能

快捷方式	功能	按键上的指示灯
FN + 	更改配置文件	 根据配置文件更改颜色 (3秒)
FN + 	Windows 锁定键	 持续亮红灯 (开启时)
FN + SCRLK	Scroll Lock	TAB 持续亮红灯 (开启时)
CAPS	Caps Lock	CAPS 持续亮红灯 (开启时)



您可以使用 iCUE 对 Windows 锁定按键进行编程, 不仅可以禁用 Windows 键, 还可以禁用其他可能中断游戏的组合键, 也可以创建新的配置文件并分配独特的颜色。

硬件模式下的灯光控制

如果没有运行 iCUE, 或者键盘连接到不支持 iCUE 的设备时, 键盘灯光效果可通过下方的板载快捷方式进行控制。

快捷方式	功能
FN + 	以 20% 为减量调整背光亮度
FN +  (按下)	循环切换基础灯光效果
	水彩颜色 > 螺旋彩虹 > 淅沥雨水 > 彩虹波浪 > 闪回 > 输入时点亮 (每个按键) > 输入时点亮 (涟漪效果) > 切换颜色 > 彩色脉冲 > 色彩波浪 > 静态颜色 (八种颜色)
FN +  (按住)	将灯光效果重置为板载默认模式
FN +  	更改灯光效果的方向*
FN +  	更改灯光效果的速度*

*仅部分效果支持此功能。



您可以借助 iCUE 编辑灵动的动态自定义多层次灯光效果, 然后将其保存到板载存储空间。

标准快捷方式

Windows

快捷方式	WINDOWS 功能
CTRL + ALT + FN + ←	Control + Alt + Delete
ALT + FN + 4	Alt + F4

全尺寸键盘按键

快捷方式	按键功能
FN + ESC	请查看键帽上的功能图例
FN + SHIFT + ESC	
FN + 数字键	F1 到 F12
FN + ↑	向上箭头键
FN + ←	向左箭头键
FN + ↓	向下箭头键
FN + →	向右箭头键

快捷方式	按键功能
FN + DEL	Delete
FN + INS	Insert
FN + HOME	Home
FN + END	End
FN + PG UP	Page Up
FN + PG DN	Page Down
FN + PRTSC	Print Screen
FN + PAUSE	Pause Break

控件快捷方式

音频和媒体

快捷方式	音频功能
FN + 🔇	音频静音
FN + 🔊	降低音量
FN + 🔊	提高音量

快捷方式	媒体功能
FN + ⏮	上一曲
FN + ⏸	播放 / 暂停
FN + ⏭	下一曲

鼠标光标

快捷方式	鼠标功能
FN + ⬆️	向上移动光标
FN + ⬅️	左移动光标
FN + ⬇️	向下移动光标
FN + ➡️	向右移动光标

快捷方式	鼠标功能
FN + ⏴	左击
FN + ⏵	右击
FN + ⏴	增加光标速度*
FN + ⏵	降低光标速度*

*适用的光标速度设置为125、250、500、1000 和 2000 DPI。

宏录制

随时可通过以下流程录制宏。在硬件模式下，宏会被录制到板载存储空间中，在软件模式下，宏会被录制到当前 iCUE 配置文件中。

录制流程	按住 FN + M (2 秒钟)	>	 按下按键开始录制	>	按下 FN + M	>	按任意键或 FN + 按键组合以保存
录制按键上的 指示灯 	闪动红灯	>	闪烁红灯	>	快速闪烁 红灯	>	按住 FN + M 以取消 (2秒钟)

清除流程	按住 FN + M (2秒钟)	>	按下 FN +	>	按任意键或 FN + 按键组合 以清除	可以录制的按键：* • 标准按键 • 标准快捷方式
录制按键上的 指示灯 	闪动红灯	>	快速闪烁 红灯	>	快速闪烁红灯	宏可以录制到： • 任何按键** • FN + 按键** • FN + 菜单 (FN2) + 按键

*硬件灯光、特殊功能、无线模式和控件快捷方式无法录制。

**功能键、宏录制和无线快捷方式无法录制。


注意：将宏保存到按键或现有快捷方式将覆盖现有功能，直到保存的按键或快捷方式被清除。



您可以使用 iCUE 来编辑录制的宏，并向按键分配其他操作。


电池拆卸信息

本产品使用可充电电池，处置和回收故障产品时，务必遵照安全指导原则。如要安全地拆卸电池以进行处置和回收，请遵照下图的编号步骤进行操作。

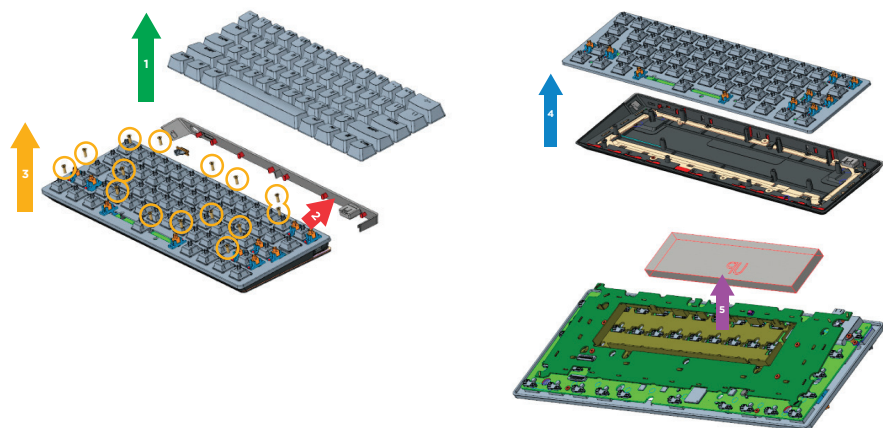

CORSAIR MEMORY, Inc.建议客户遵照当地法律和规定，回收使用过的电子硬件和可充电电池。

GETTING TO KNOW YOUR KEYBOARD

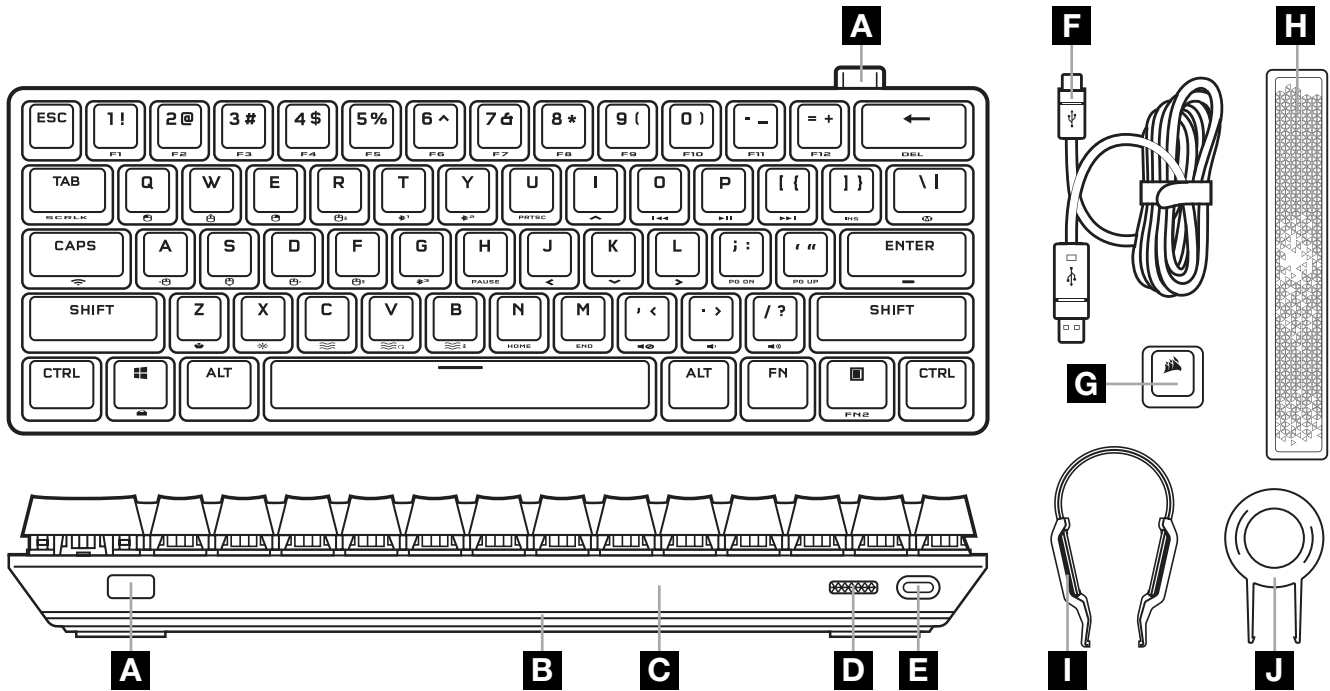

- A** SLIPSTREAM WIRELESS ADAPTER
- B** 360° LIGHTEDGE
- C** REMOVEABLE ACCENT PIECE
- D** POWER SWITCH
- E** USB TYPE-C PORT
- F** USB TYPE-C TO TYPE-A CABLE
- G** OPTIONAL CORSAIR LOGO ESC KEY
- H** OPTIONAL RADIANT SPACE BAR
- I** KEYSWITCH PULLER
- J** KEYCAP PULLER

BEFORE FIRST USE

Charge the keyboard fully before first use by connecting the USB cable (F) to the keyboard USB Type-C port (E) and to an available USB 3.0 or better Type-A port on a compatible device including:

Windows® PC	Apple Mac®	Microsoft Xbox One* Microsoft Xbox Series X S*	PlayStation 4** PlayStation 5**
-------------	------------	---	------------------------------------

*Keyboard is compatible out of the box, see corsair.com/xbox-support for details.

**See Connecting to Sony PlayStation section.

FACTORY RESET

Hold the ESC key while turning the power switch (D) to on, then release the ESC key after two seconds. The keyboard will then power on normally and be reset to factory defaults.

CHARGING & BATTERY LIFE

The keyboard will indicate charging status when plugged into a compatible device via USB cable.

INDICATOR	INDICATION	STATUS
Enter Key	Solid Green	Fully Charged
	Pulsing Green	Charging

Upon powering on the keyboard or using the check battery life shortcut below, an indication will play to denote current battery charge level.

SHORTCUT	FUNCTION	ON-KEY INDICATION	STATUS
FN + 	Check Battery Charge Level	Solid Green	Fully charged
		Blinking Green	High charge
		Blinking Amber	Medium charge
		Blinking Red	Low charge
		Pulsing Red	Critically low charge

Tips and tricks:

- If left on and idle, the keyboard will go to sleep to conserve battery (adjustable in iCUE)
- Reduce brightness or turn off backlighting to extend battery life (and increase charging speed)
- Charge as soon as possible when battery is critically low to maximize battery health and longevity
- Always plug into a USB 3.0 port or better to ensure adequate charging current

CONNECTING VIA SLIPSTREAM WIRELESS

1. Plug in the SLIPSTREAM wireless adapter (A) to an available USB 2.0 or better Type-A port
2. Slide the keyboard power switch (D) to the on position
3. Switch to SLIPSTREAM wireless mode (see below)
4. After SLIPSTREAM connects automatically, the shortcut key turns solid white for 3 seconds



SHORTCUT	FUNCTION	ON-KEY INDICATION	STATUS
FN +  (Press)	Switch to SLIPSTREAM wireless mode	Solid White (3 sec)	Connected
		Pulsing White	Disconnected

NOTE: To complete pairing to a SLIPSTREAM wireless adapter, initiate adapter pairing in iCUE device settings.

CONNECTING VIA *BLUETOOTH* WIRELESS

1. Initiate Bluetooth pairing on the host device such as a phone or tablet (Bluetooth 4.0 or higher)*
2. Start Bluetooth host pairing on the keyboard, up to three devices can be paired (see below)
3. Input the code from the *Bluetooth* device screen on the keyboard if requested
4. When pairing completes, the Bluetooth shortcut key turns solid blue for 3 seconds

SHORTCUT	FUNCTION	ON-KEY INDICATION	STATUS
FN +  ¹ (Press)	Switch to Bluetooth host 1 mode	Solid Blue (3 sec)	Connected
		Pulsing Blue	Disconnected
FN +  ¹ (Hold)	Start Bluetooth host 1 pairing*	Rapidly Blinking Blue	Pairing
FN +  ² (Press)	Switch to Bluetooth host 2 mode	Solid Blue (3 sec)	Connected
		Pulsing Blue	Disconnected
FN +  ² (Hold)	Start Bluetooth host 2 pairing*	Rapidly Blinking Blue	Pairing
FN +  ³ (Press)	Switch to Bluetooth host 3 mode	Solid Blue (3 sec)	Connected
		Pulsing Blue	Disconnected
FN +  ³ (Hold)	Start Bluetooth host 3 pairing*	Rapidly Blinking Blue	Pairing

*Bluetooth host device must support standard keyboard HID input.

CONNECTING VIA USB WIRED

1. Connect the keyboard via USB cable to a USB 3.0 Type-A port or better
2. The keyboard will automatically switch to USB wired mode
3. Go to iCUE device settings to select up to 8,000Hz hyper-polling with CORSAIR AXON*



*Up to 8,000Hz hyper-polling is supported on PC and Mac. Xbox and PlayStation consoles support up to 1,000Hz polling only.

NOTE: Wireless modes can be switched to at any time by pressing a wireless shortcut. Pressing the same shortcut again will switch back to USB wired mode.

CONNECTING TO SONY PLAYSTATION

The keyboard also has a special mode to support Sony PlayStation 4 and 5 via SLIPSTREAM wireless and USB wired modes that can be activated via shortcut.

SHORTCUT	FUNCTION	ON-KEY INDICATION
FN +  (Hold for 5 sec)	Switch to PlayStation mode	Blinks White (5 sec) then Solid White
	Switch back to standard mode	Pulses White (6 sec)

NOTE: Available functions may be limited depending on gaming console support and application.

SOFTWARE MODE

When iCUE is running the keyboard operates in software mode and is controlled by iCUE.



Download iCUE from corsair.com/downloads and install on a Windows PC or Apple Mac to connect all of your CORSAIR iCUE compatible products together in a single interface, giving you complete control of everything from lighting to powerful macros.

HARDWARE MODE

When iCUE is not running or the keyboard is connected to a device that does not support iCUE, the keyboard operates in hardware mode which uses profiles and settings saved to the onboard storage.




With iCUE and AXON Hyper-Processing Technology, you can create as many custom profiles as can fit onto the 8MB of onboard storage. Each profile can store complex backlighting effects (up to 20 layers), actions & macros, and settings.*

*The number of lighting effects layers per profile and total number of profiles that can be saved to onboard storage will vary based on complexity.


SWAPPING KEYSWITCHES

The keyswitches can be removed and replaced with any variety or combination of CHERRY MX RGB mechanical keyswitches. Other third party mechanical keyswitches with 3-pin design may be compatible, but are not guaranteed to work due to physical differences.


1. Push the keycap puller (J) over the keycap, then lift to remove.

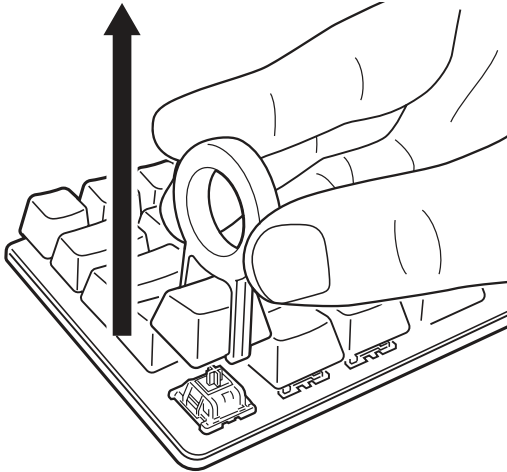


2. Position the tips of the keyswitch puller (I) under the keyswitch top and bottom tabs, then press in and lift to remove.

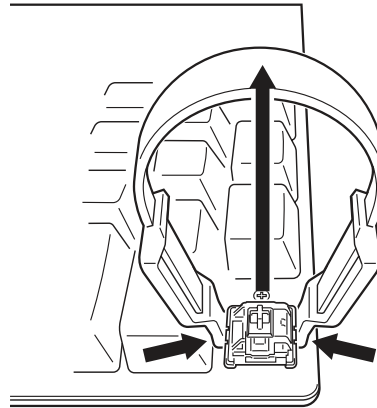

3. Align the new keyswitch's pins and base with the sockets and opening.

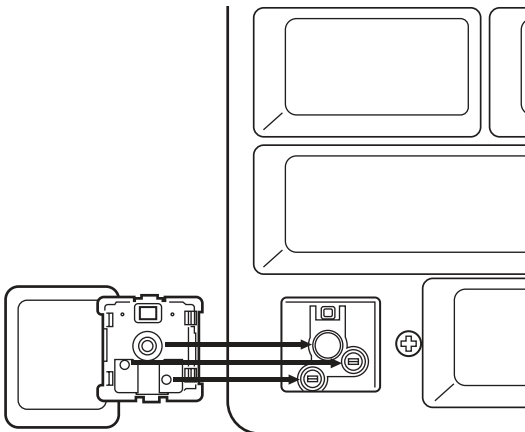

4. Carefully press the keyswitch in until it clicks into place. If you feel any resistance, remove and try again.

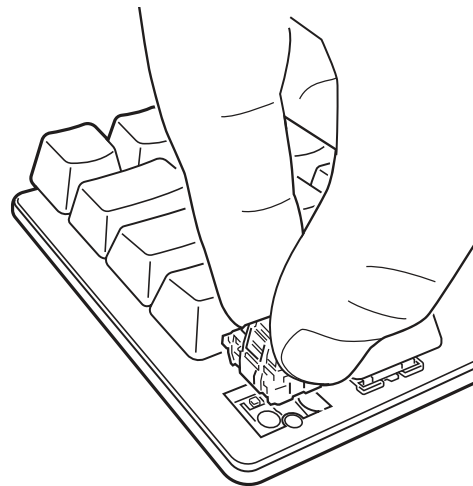

NOTE: Be sure to align the new keyswitch properly before insertion to prevent bent pins or damage.

PROFILE & LOCK FUNCTIONS

SHORTCUT	FUNCTION	ON-KEY INDICATION
FN + 	Change Profile	 Changes color based on profile (3 sec)
FN + 	Win Lock	 Solid red (when on)
FN + SCRLK	Scroll Lock	TAB Solid red (when on)
CAPS	Caps Lock	CAPS Solid red (when on)



With iCUE you can program Win Lock to not only disable the Windows key, but other key combinations that could interrupt your game, as well as create new profiles and assign unique colors.

HARDWARE LIGHTING

Basic hardware lighting effects can be controlled via the below shortcuts when iCUE is not running or the keyboard is connected to a device that does not support iCUE.

SHORTCUT	FUNCTION
FN + 	Adjusts backlighting brightness in 20% decrements
FN +  (Press)	Cycle through basic lighting effects
	Water Color > Spiral Rainbow > Rain > Rainbow Wave > Visor > Type Lighting (Per-key) > Type Lighting (Ripple) > Color Shift > Color Pulse > Color Wave > Static Color (8 Colors)
FN +  (Hold)	Reset lighting effect to onboard default
FN +  	Change lighting effect direction*
FN +  	Change lighting effect speed*

*Functions supported on select effects.



With iCUE you can program vivid and dynamic custom multi-layered lighting effects then save them to onboard storage.

STANDARD SHORTCUTS

Windows

SHORTCUT	WINDOWS FUNCTION
CTRL + ALT + FN + 	Control + Alt + Delete
ALT + FN + 4	Alt + F4

Full-size Keyboard Keys

SHORTCUT	KEY FUNCTION
FN + ESC	See legend on keycap for function
FN + SHIFT + ESC	
FN + number keys	F1 to F12
FN + 	Arrow Up
FN + 	Arrow Left
FN + 	Arrow Down
FN + 	Arrow Right

SHORTCUT	KEY FUNCTION
FN + DEL	Delete
FN + INS	Insert
FN + HOME	Home
FN + END	End
FN + PG UP	Page Up
FN + PG DN	Page Down
FN + PRTSC	Print Screen
FN + PAUSE	Pause Break

CONTROL SHORTCUTS

Audio and Media

SHORTCUT	AUDIO FUNCTION
FN + 	Mute Audio
FN + 	Decrease Volume
FN + 	Increase Volume

SHORTCUT	MEDIA FUNCTION
FN + 	Last Track
FN + 	Play / Pause
FN + 	Next Track

Mouse Cursor

SHORTCUT	MOUSE FUNCTION
FN + 	Move Cursor Up
FN + 	Move Cursor Left
FN + 	Move Cursor Down
FN + 	Move Cursor Right

SHORTCUT	MOUSE FUNCTION
FN + 	Left Click
FN + 	Right Click
FN + 	Increase Cursor Speed*
FN + 	Decrease Cursor Speed*

*Available cursor speed settings are 125, 250, 500, 1000, and 2000 DPI.

MACRO RECORDING

Macros can be recorded at any time via the below process. In hardware mode your macros are recorded to onboard storage and in software mode your macros are recorded to the current iCUE profile.

Macro Recording Process	Hold FN + M (2 seconds)	>	 Press keys to record	>	Press FN + M	>	Press any key or FN + key combination to save
Recording On-Key Indication 	Pulses Red	>	Blinks Red	>	Rapidly Blinks Red	>	Hold FN + M to cancel (2 seconds)

Macro Clearing Process	Hold FN + M (2 seconds)	>	Press FN + M	>	Press any key or FN + key combination to clear	Keys that can be recorded:*
Recording On-Key Indication 	Pulses Red	>	Rapidly Blinks Red	>	Rapidly Blinks Red	• Standard keys • Standard shortcuts

Macros can be recorded to:

- Any key**
- FN + key**
- FN + Menu (FN2) + key

*Hardware lighting, special functions, wireless modes, and control shortcuts cannot be recorded.

**Function keys as well as macro recording and wireless shortcuts cannot be recorded over.


NOTE: Saving a macro to a key or existing shortcut will overwrite that function until cleared.



With iCUE you can edit recorded macros and assign additional actions to keys.

BATTERY REMOVAL INFORMATION

This product uses a rechargeable battery and safety guidelines must be followed in the event that the product is disabled for disposal and recycling. To safely remove the battery for disposal and recycling, follow the numbered steps with the below diagrams.

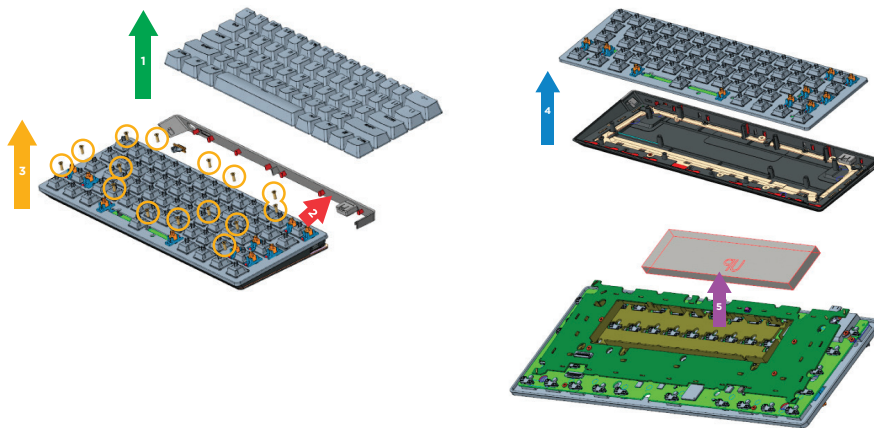

CORSAIR MEMORY, Inc. encourages customers to recycle used electronic hardware and rechargeable batteries in accordance with local laws and regulations.



官方网站: corsair.com
技术服务热线: 400 841 7130
支持: support.corsair.com

博客: corsair.com/blog
论坛: forum.corsair.com
微信: CorsairRMA

© 2022 CORSAIR MEMORY, Inc. 版权所有。实物可能与所示图片不同。

进口商: 可赛尔 (深圳) 贸易有限公司 | 产地: 中国 | 产品: 键盘

© 2022 CORSAIR MEMORY, Inc. All rights reserved.

49-002536 AB

